

# Tarmac/Concrete Oil Removal Instructions

These are general instructions for the usage of the oil removal from either the kits or individual chemicals. Whilst the images show it being used on tarmac the principal is the same for concrete. Large areas should be done in small sections.



1. SHAKE 'Oil Shift' liquid well and pour evenly over stain area.



2. SCRUB aggressively into surface using deck brush.



3. LEAVE. For 30 minutes and then scrub again, adding a little water to keep oily emulsion mobile.




4. ENSURE oily emulsion remains Wet and fully mobile.




5. LAY 8 absorbent pads on treated area to absorb the oily emulsion.



6. STAND on pads to maximise absorption.

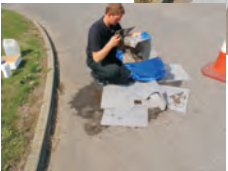

7. LIFT pads and place in disposal bag (provided).

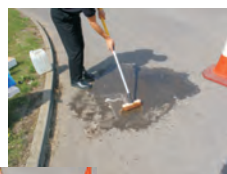

8. WET area with 3 litres of water, scrub again and absorb emulsion with remaining 10 pads.



9. SPRINKLE sweeping compound onto treated area; work into surface with deck brush.



10. SWEEP compound up using dustpan and brush and place in disposal bag.